


# CUSTOM 823 How to Fill with Ink

## Carrying and Writing

**Carrying**

**Writing**

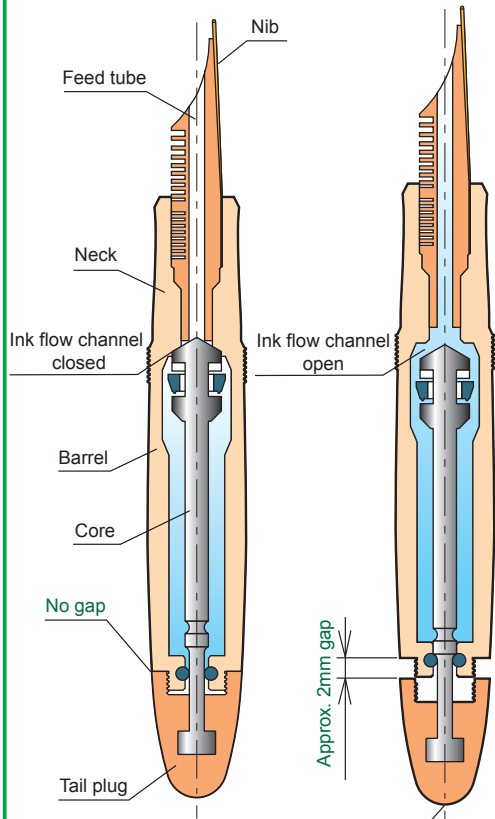

Before use, keep the nib upward and unscrew the tail plug to make a 2mm gap.

Do not pull out the tail plug fully.

Note: White lubricant is applied inside the pen barrel for proper piston functioning.

## Filling Instructions

**1**

Hold the pen keeping the nib upward. Pull the tail plug gently until the stopper works.


**2**

Keep pulling out the tail plug until the piston stops at the end of the barrel.

**3**

Immerse the pen up to its neck in ink and then push the tail plug back in.


**4**

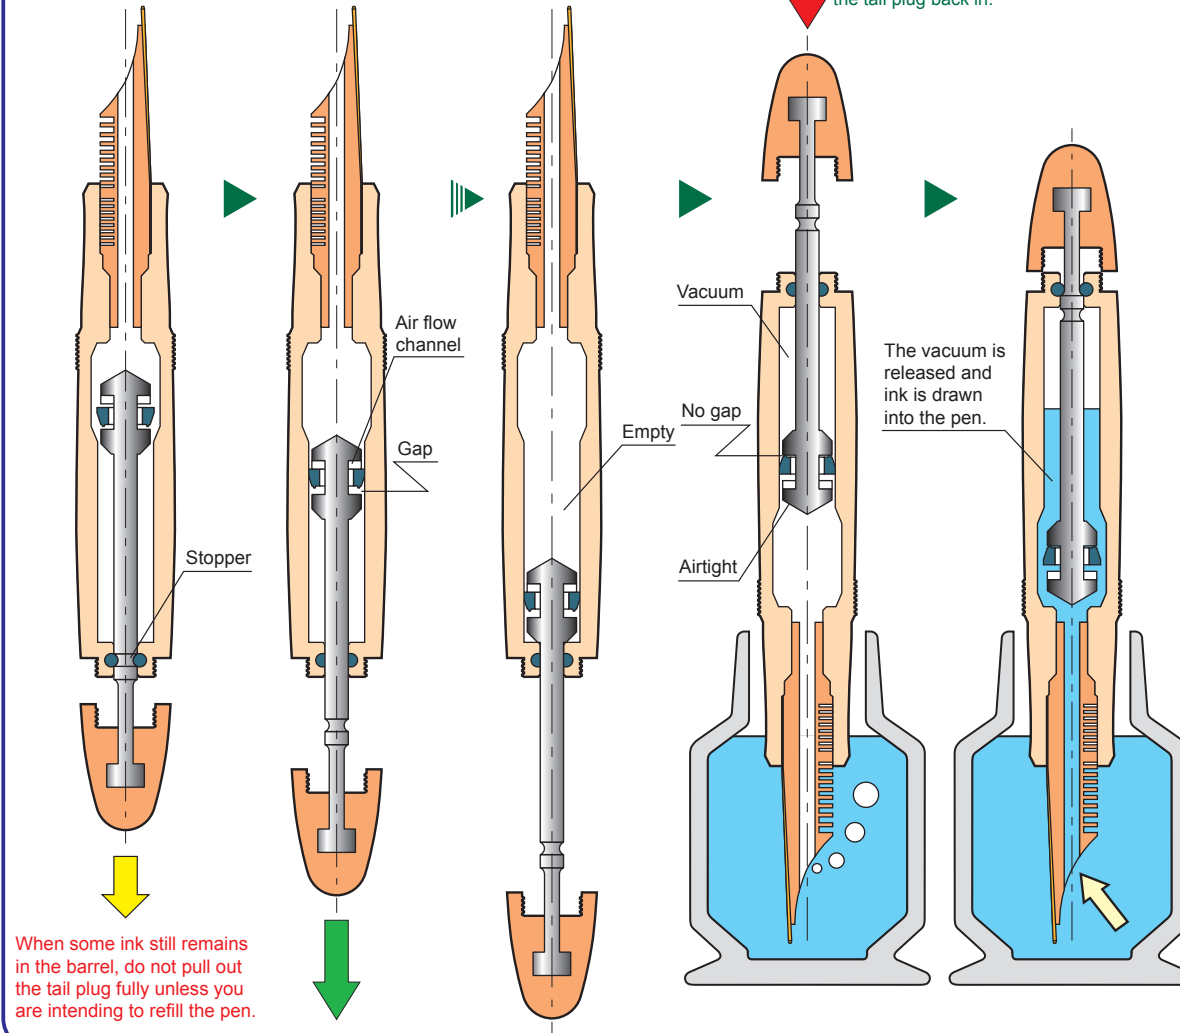

When some ink still remains in the barrel, do not pull out the tail plug fully unless you are intending to refill the pen.

## How to work the piston valve

When pulling the tail plug

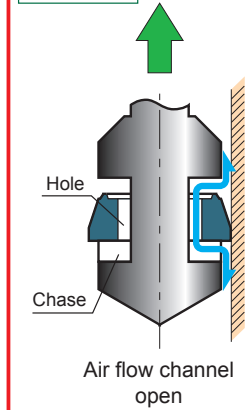

When pushing the tail plug

